

Thomas Gas

42 Churinga Rd, ALDGATE S A 5154
Ph 08 8339-2388 Email: admin@thomastgas.com.au Fax 08 8370-8199

Automatic Regulator Operation

Your regulator is situated between your two gas cylinders. Its job is to regulate the pressure of the gas coming into your home.

An automatic regulator is designed to have both of your cylinders turned on at the same time. This allows a service cylinder to be used first then to access a reserve cylinder without causing interruption to your supply. No more cold water half way through a shower !

Once the service cylinder is empty a valve on the inside of the regulator which you can not see opens so that gas can then flow from the reserve cylinder.

While the service cylinder has a supply of gas the indicator will show either Green or White, once empty, the indicator will then show fully Red. This means the reserve cylinder is now being accessed. When the indicator is showing Red the changeover has been made and therefore letting you know you should be placing your order to keep in a continual rotation of gas.

If you can please place your order with our office as soon as the reserve cylinder has been started this will avoid you running completely out of gas.

It is advised that the indicator lever does not get switched from cylinder to cylinder, as this allows the driver when making delivery to know which is the empty cylinder prior to disconnection.

