

Thomas Gas

42 Churinga Rd, ALDGATE S A 5154
Ph 08 8339-2388 Email: admin@thomastgas.com.au Fax 08 8370-8199

Manual Changeover Regulator Operation

Your regulator is situated between your two gas cylinders. Its job is to regulate the pressure of the gas coming into your home. A manual regulator only allows one cylinder at a time to be consumed.

The lever on the Tee-piece must be turned to the cylinder in use. This is usually a brass fitting, and on some regulators painted.

When the first cylinder/service cylinder being used is empty turn the pointer to face the second cylinder/reserve cylinder. The reserve cylinder then must also be turned on to allow for the gas flow.

Relight any appliances required.

If you can please place your order with our office as soon as the reserve cylinder has been started to avoid running completely out of gas.

